1.1 Pre-	pre-built set			1									1
assemble	pie-built set												
System													
System	1.2 Mount												
	1.2 Mount System												
	System												
		1.0.6 dd Undoto											
		1.3 Add Update Over Air											
		OverAir											
			1.4 Perform										
			1.4 Perform Ventilation										
			venutation										
				2.1 Measure	low-power signal								
				Outdoor	tow-power signat								
				Condition									
-	<u> </u>			Condition	2.2 ETL								
					2.2 ETL								
	<u> </u>					3.1 Preview Data	Utml						
						5.1 Fleview Data	nuni						
	╞────						3.2 Provide						
							Mobile Services						
							Pioblie Services						
	<u> </u>					Expense Log,		3.3 Gather and					
						Maintenance Log		Manage					
						Maintenance Log		Resources					
									4.1 Detect Water	True /Felee			
									A.I Detect water	True/Faise			
									Neeu				
-	<u> </u>								Water Output	4.2 Request			
										Water Need			
										water neeu			
	+					Null or Data					5.1 Detect	Error Code, Alert.	
						(error code)					System Failure	LITOI COUC, Alert.	
	1					(ciror code)					oystem raiture		
	+	1						Maintenance Log				5.2 Create	
								- idintenunce Lug				Maintenance	
												Logging	
	+	1				Maintenance Log		Warranty Part,				Name, data, task	5 2 Schedule
	1					inamendice Log		Warranty Type					Preventive
	1							(limited or					Maintenance/Ins
								(anniceu oi				SCI VICE COUE	i iunitenance/1115